

## FLUORESCENT BALLAST SPECIFICATIONS

### DESCRIPTION

Model No.	Ballast Type	Starting Type	Qty of Lamps	Lamp Type
BL-1520LB-1	ELECTRONIC	INSTANT START	1	F15T8, F17T8, F20T8, F20T9

### ELECTRICAL CHARACTERISTICS

Input Voltage	Frequency	Lamp Watts	Input Watts	Input Current	THD	Power Factor	Sound Rated
120	60Hz	20W	17.5W	<0.28A	<160%	>0.55	A
Min. Starting Temp	Heat Protection Level	Outdoor Type	Open Circuit Voltage	Ballast Frequency	NO PCBS		
0°F/-18°C	CLASS P	TYPE 1	600V	>40KHZ			

### PHYSICAL CHARACTERISTICS

	CASE DIMENSIONS					
	Units	M	L	W	H	
	Inch	5.57	6.71	1.75	1.31	
	TOL(+/-)	0.05	0.05	0.05	0.05	
LEAD LENGTH						
Unit	Black	White	Red	Yellow	Green	Blue
Inch	13	13	21.25	/	/	7.09
TOL(+/-)	+0.5, -0	+0.5, -0	+0.5, -0	/	/	+0.5, -0

### BALLAST LABEL

<p><b>120V - 60Hz</b> INPUT CURRENT 0.36A</p> <p>LISTED FLUORESCENT BALLAST 22VE</p> <p>E244627 1108</p> <p><a href="http://www.innovativelighting.cn">www.innovativelighting.cn</a></p>	<p>USE FOR 1 LAMP F15T8(15W), F17T8(17W) F20T8(20W), F20T9(20W)</p> <p>Instant Start</p> <p>Normal Power Factor Class P, Outdoor Type1</p> <p><b>CAUTION:</b> Disconnect All Input Power Before Installing Or Servicing.</p>	<p><b>Electronic Ballast</b></p> <p>CAT:1340 MODEL:BL-1520LB-1</p>
--	--	--

### USPAR ENTERPRISES INC.

ADD: 13404 Monte Vista Ave Chino, CA 91710  
WEBSITE: [www.uspar.com](http://www.uspar.com)

TEL: 1-909-591-7506  
FAX 1-909-590-3220